


# WA10A FOOT PEDAL

SEE REVERSE SIDE FOR IMPORTANT INFORMATION CONCERNING LIMITED WARRANTY, AND LIMITATION OF LIABILITY.

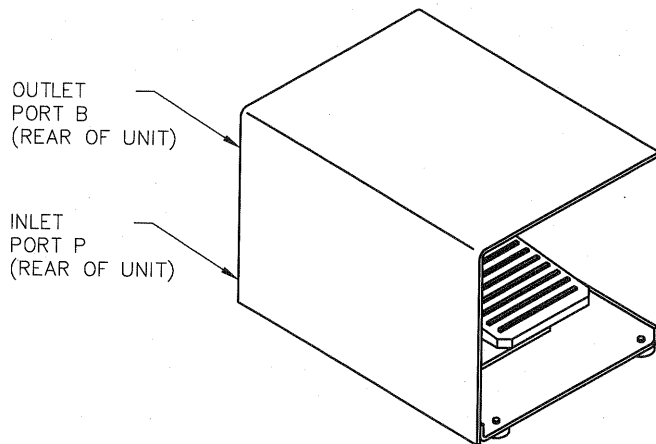

**FIGURE 1**

## GENERAL SPECIFICATIONS

- \* The WA10A Foot Pedal is designed to be used with Daniels pneumatic crimp tools like the WA22 series and WA27 series.
- \* Either the hand operated valve or the WA10A Foot Valve may be used with the pneumatic tools. The working pressure of the tools is 80–120 PSI. It is recommended that each tool be set up with a Regulator and a Filter (Daniels WA27RF).
- \* All Crimp Tools, Positioning Heads, Bench Mounts, Gages and Foot Valves must be ordered separately by part number.

## SIZE & WEIGHT


Length: 8.0" Width: 6.0" Height: 5.8" Weight: 7.1 lbs.

## ACCOMMODATIONS

The Foot Pedal will accommodate all Daniels WA22 series and WA27 series of pneumatic crimp tools.

## FOOT VALVE OPERATION WITH DANIELS PNEUMATIC TOOLS

Attach Foot Valve between air supply and tool air inlet as shown in Figure 2. Depress hand valve and lock in down position with the set screw (A) using a 1/16 hex Allen® wrench.

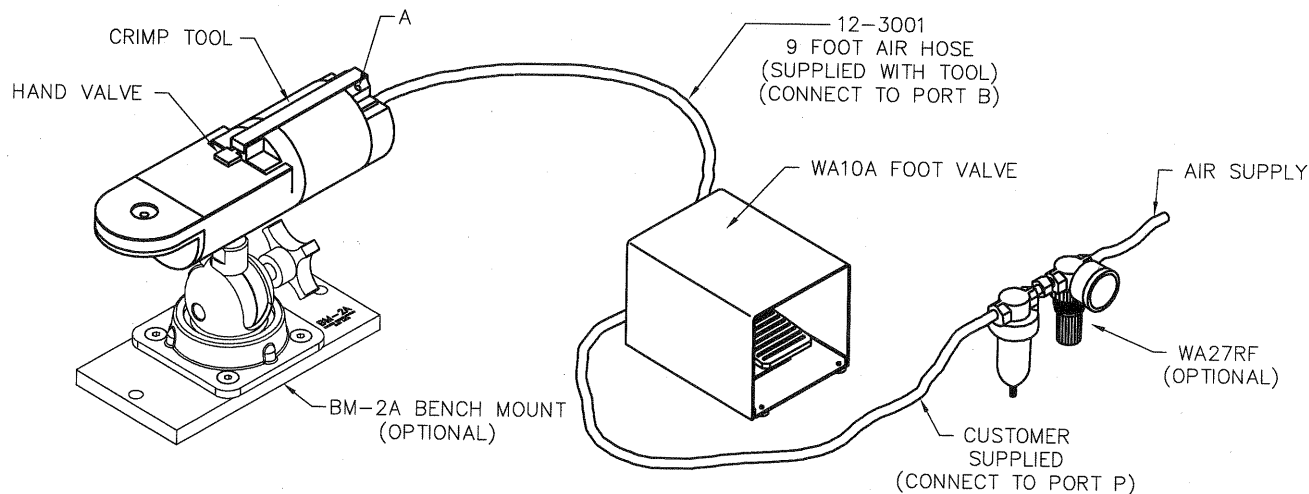

**FIGURE 2**

### CARE OF THE FOOT PEDAL

It is a good practice to keep the Foot Pedal free of debris. Any debris that accumulates in the Foot Pedal may be blown out with compressed air.

We strongly recommend that you:

1. DO NOT immerse the Foot Pedal in any cleaning solution.
2. DO NOT spray oil into the Foot Pedal to lubricate.
3. DO NOT attempt to disassemble the Foot Pedal or make repairs.

DMC offers complete refurbishing and recalibration services for their tools as well as repair services for the Foot Pedal.

DMC specially engineers and manufactures complete tool kits to satisfy individual customer requirements, such as total aircraft support, general shop maintenance or production, on board ship and vehicle service, etc.

### LIMITATION OF LIABILITY

DANIELS MANUFACTURING CORPORATION IS NOT LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY NATURE OR KIND RESULTING FROM THE USE, OR MISUSE, OF ANY OF ITS PRODUCTS. OWNERS AND USERS OF DMC PRODUCTS ASSUME FULL RESPONSIBILITY FOR INSTRUCTING THEIR EMPLOYEES IN THE PROPER AND SAFE USE OF SUCH PRODUCTS.

### LIMITED WARRANTY

DMC (Daniels Manufacturing Corporation) warrants each new product sold by it to be free from defects in material and workmanship under normal use and service. DMC's obligation under this warranty is limited to the free correction or, at DMC's option, the refund of the purchase price of any such product which proves defective in normal service within ninety (90) days after delivery to the first user, provided that the product is returned to DMC with all transportation charges prepaid and which shall appear to DMC's satisfaction, after DMC's inspection, to have been defective in material or workmanship, it being understood that DMC products are not consumer products. This warranty shall not cover any damage to any product which, in the opinion of DMC, was caused by normal wear, misuse, improper operation, tampering, neglect or accident. This warranty is in lieu of all other warranties express or implied. No warranty, express or implied, is made or authorized to be made or assumed with respect to products of Daniels Manufacturing Corporation other than those herein set forth.