

HX33

Operating Instructions



Pneumatic Crimp Machine

Version HX33-DS Rev. D

Translation of the original operating instructions

Producer

WEZAG GmbH
Werkzeugfabrik
Wittigstr. 8
35260 Stadtallendorf
Germany

Sale

DMC
Daniels Manufacturing Corporation
526 Thorpe Road
Orlando, FL 32824-8133
USA

Telephone: 001 407 855 6161

www.dmctools.com

Date	Version
03.01.2016	REV. A
04.10.2016	REV. B
02.03.2017	REV. C
11.07.2017	REV. D

© by WEZAG GmbH

Reproduction of these instructions or parts of them in whatever form is not permitted without express written permission from the publisher.

We reserve the right to make technical changes necessary to improve the machine that could diverge from figures and information in these instructions.

Table of Contents

1	Introduction.....	4
1.1	Product Specification	4
1.2	Conformity	5
1.3	Dealing with the Operating Instruction	6
2	Safety.....	6
2.1	Warning & Safety Precautions in this Operating Instruction	6
2.2	Safety Precautions	6
2.3	Responsibilities.....	8
2.4	Designed Use	9
2.5	Predictable Misuse	9
2.6	Hazardous Areas.....	9
3	Shipment	10
3.1	Packing.....	10
3.2	Packing Contents.....	10
4	Technical Description	11
4.1	Operators Guide	11
4.2	Machine Identification	12
4.3	Technical Data.....	12
4.4	Safety Guard.....	12
4.5	Release Button	13
5	Transport and Installation	13
5.1	Transport	13
5.2	Installation.....	13
6	Commissioning / Connecting to Compressed Air Supply	14
7	Tooling.....	16
8	Normal Operation / Production Cycle	17
9	Maintenance.....	18
9.1	Maintenance Plan	18
9.1.1	Daily	18
9.1.2	After every 100.000 crimp cycles or every 2 years	19
10	Problem Handling and Fault Diagnostics	19
10.1	Forced regulation catches / Alignment of the limit switches	20
11	Removal from Service, Demounting, Disassembly,	21
12	Storage	21
13	Disposal.....	21
14	Exploded View Drawing, Spare Part List	22
14.1	Exploded View Drawing	22
14.2	Parts List Exploded View Drawing	23
14.3	Pneumatic Diagram	25
14.4	Parts List Pneumatic	26
14.5	Accessories overview for re-orders.....	26
14.6	Additional Information / Limitation of Liability / Limited Warranty	27

1 Introduction

1.1 Product Specification

The DMC HX33 is a bench top pneumatic crimp machine that is compatible with M22520/5 military and many DMC "Y-die" series crimp dies. The die sets are interchangeable and can be easily installed and removed from the HX33 pneumatic crimp tool.

Utilizing the enclosed foot pedal, the crimping cycle of the HX33 is activated and allows the operator to have both hands free to insert the crimped item and wire. All HX33 crimp tools are equipped with a positive closing mechanism to ensure consistent crimp quality.

The HX33 has an emergency release button that will open the crimping jaws in the event of blocked jaws caused by operation or handling errors or wrongly placed terminals.


All other applications of the HX33 are only permitted with a written permission of the manufacturer. For all unauthorised applications of the HX33 the manufacturer cannot be held liable for any resultant damage or injury.


1.2 Conformity



The machine may only be used for the purpose specified in the operating instruction. The producer as well as the distributor will not be liable for any damages which may result due to the machine being used for a purpose other than that for which it was intended. **This is done entirely at the user's own risk.**

The HX33 pneumatic crimp machine is CE compliant. **The original of the following declaration of conformity was supplied together with the operating instructions of the machine.**


WDT
 WIRE PROCESSING SYSTEMS
 a WEZAG brand



Konformitätserklärung
 gemäß EG-Richtlinie Maschinen 2006/42/EG vom 17.05.2006
Declaration of Conformity
 according to EC Machinery Directive 2006/42/EG of May 17th, 2006

<p>Bezeichnung der Maschine Description of the machine</p> <p>Maschinentyp Type of machine</p> <p>Seriennummer der Maschine Serial number of the machine</p> <p>Hersteller der Maschine Manufacturer of the machine</p> <p>Zutreffende EU Richtlinien Applicable EU directives</p> <p>Angewandte harmonisierte Normen Applied harmonized norms</p>	<p>Pneumatische Crimpmaschine Pneumatic Crimping Machine</p> <p>UP 14, UP 14 BA, UP 14 Z, UP 14 ZLW, UP 14 ZLD</p> <p>Seriennummer eintragen.</p> <p>WEZAG GmbH Werkzeugfabrik Wittigstr. 8 35260 Stadallendorf Deutschland/Germany</p> <p>2006/42/EG Maschinenrichtlinie Machinery Directive</p> <p>DIN EN ISO 12100; DIN EN ISO 13857; DIN EN 349; DIN EN ISO 13849-1</p>
--	---

Wir erklären, dass die oben genannte Maschine in ihrer Konzipierung und Bauart und in der von uns in Verkehr gebrachten Ausführung allen einschlägigen Bestimmungen der Maschinenrichtlinie sowie den weiteren oben aufgeführten Richtlinien entspricht. Bei Änderungen der Maschine verliert diese Erklärung ihre Gültigkeit.

We declare that the above mentioned machine, with its design and type of construction, as well as the produced version, meets all relevant regulations of the Machinery Directive as well as the above mentioned harmonized norms. This declaration will lose its validity in case of any modifications.

Stadallendorf, 15.09.2016
Ort & Datum/ Place & Date

WEZAG GMBH
Werkzeugfabrik
Wittigstraße 8
35260 Stadallendorf

IA. D. Steffens

Mrs. Dr. D. Steffens/Head of Quality Management
Name & Funktion/Name & Function

Konformitätserklärung_UP14_REV_E

Fig. 1.1

1.3 Dealing with the Operating Instruction

The operating instruction manual contains all information concerning operating elements, operation, commissioning, and maintenance work as well as technical data.

The operating instruction must be constantly within reach of the HX33 pneumatic crimp machine. Every machine operator must read and understand the operating instruction in order to ensure safe and efficient production with this piece of equipment.

DMC declines to accept any liability for damages that are incurred due to the fact that the instructions on the machine or in the operation instruction have been disregarded.

The user is responsible for supplementing the operation instruction with any instructions resulting from current national regulations for accident prevention and protection of the environment.

This operating instruction has to be guarded for later use.

The German original version of the operating instruction is legally binding.

2 Safety

2.1 Warning & Safety Precautions in this Operating Instruction

The following warnings and safety related cautionary notices in the individual chapters alert you to various levels of danger:



DANGER

- + Identifies an **imminent, serious danger**, which, if it is not avoided, will lead to serious injuries or even to death.
-



CAUTION

- + Identifies a **possible danger**, which, if it is not avoided, will lead to serious injuries or even to death.
-



ATTENTION

- + Identifies a **potential dangerous situation**, which, if it is not avoided, can lead to medium or minor injuries or material damages.
-



INFORMATION

- + If this information is not followed, it can lead to a deterioration of the operating procedure.
-

2.2 Safety Precautions

The HX33 pneumatic crimp machine has been constructed according to state-of-the-art technology and the acknowledged technical safety regulations.

When carrying out jobs such as installation, putting the machine into operation or setting it up, operation, changing the conditions of use and the mode of operation or carrying out maintenance and service jobs, it is important to observe the procedures for switching off the machine described in the operation instruction.

Please observe the national regulations according to the minimum age of the personnel operating the HX33 pneumatic crimp machine. Allowing younger persons access to the machine is strictly prohibited.

- + Do not operate the HX33 pneumatic crimp machine until you have studied and fully understood all the instructions described in this operating instruction.
- + Operate the HX33 pneumatic crimp machine in a dry and dust free environment only. The crimp machine is only allowed to be used when it is in complete functional condition.
- + Do not modify the HX33 pneumatic crimp machine nor use it for any purpose for which it was not intended.
- + The use a chain hoist or lifting device is recommended for transporting the crimping machine.
- + Wear suitable safety shoes when transporting the machine.
- + Prior to starting up the HX33 pneumatic crimp machine, make sure it is firmly positioned on a sturdy stand or bench to prevent it from tipping over. Ensure that the table or bench is stable enough to support the machine in normal use.
- + Assure an appropriate table height. The table height is dependent on the position of the operator, (work in sitting or standing position) according to prEN 894-4:2004, Table A.1
- + Assure appropriate illumination of the working place. (EN 1837:2009-12 – chapter 4.2: “The general value of illumination has to be 500 lx [...]”).
- + Connect compressed air supply only with the supplied compressed air hose.
- + Place the pneumatic tubes on the floor or out of the way so that they do not cause a trip hazard.
- + Pneumatic tubes must not be damaged.
- + Place the foot pedal on the floor. No other place is allowed. The foot pedal must be movable, so that the operator has the possibility to change his position for ergonomic and production needs.
- + Do not lay the foot pedal in aisles or walkways.
- + Assure free access to the operating elements of the machine, especially the foot pedal and the release button. In case of imminent danger press the release button immediately. The release button must be within the direct reach of the operator. It must not be covered.
- + Before starting maintenance, disassembly or repair work, the crimp machine must be disconnected from air supply.
- + Maintenance work may be performed only by authorized and properly trained personnel.
- + Due to the risk of hand or finger injury, never try to reach into the machine before having assured that the machine is disconnected from the air supply. Disconnect the air supply before changing the safety guard and the dies.
- + Before commissioning the machine, it is always important to check whether all safety devices, especially the safety guard and the die set, are installed and are functioning correctly.
- + Check the release button before starting the work on the crimp machine. In the case of imminent danger immediately press the release button. The release button must be within the direct reach of the operator. It must not be covered.
- + Exercise caution at all times when the HX33 pneumatic crimp machine is switched on.
- + The HX33 pneumatic crimp machine is not allowed to be used without an installed die set and safety guard.
- + The HX33 pneumatic crimp machine may only be set up and operated in perfect technical condition, observing all the safety regulations and considering any possible dangers.
- + The crimp machine is only allowed to be used when it is in a completely functional condition.
- + If you suspect that the machine cannot be operated safely, it must be switched off and secured against anyone accidentally switching it on.
- + In cases of a machine malfunction, production must be stopped and the malfunction must be fixed before continuing work with the machine.
- + Work with caution.

- + Only one person is allowed to work on or with the machine at a time.
- + Only trained personal are allowed to work on or with the machine.
- + It is only allowed to work with the specified air pressure.
- + When working with the HX33 pneumatic crimp machine, do not wear loose clothing, jewellery or long, loose hair that can get caught in the HX33 pneumatic crimp machine.
- + Disconnect the HX33 pneumatic crimp machine from the air supply before attempting any maintenance work. Due to the risk of hand or finger injury, never try to reach into the machine before having assured that the machine is disconnected from the air supply.
- + The machine can only be depressurized by disconnecting the machine from the main air supply.

2.3 Responsibilities

The HX33 pneumatic crimp machine may only be operated by suitably trained and authorized personnel. The user must clearly define and observe the responsibilities of the personnel for operation, set-up, maintenance, and service. It is particularly important to define who is responsible for work on the pneumatic equipment. Such work should only be carried out by specially trained staff.

Should the user make any changes to the machine without consulting the producer or the distributor, the latter will not be liable for any damage that may result.

The user of the HX33 pneumatic crimp machine is responsible for making sure that all persons involved in any way, either in the installation or in maintenance of the machine, have been thoroughly trained on the system using this operating instruction.

The user is also responsible for the training of operators and the instruction must include the following aspects:

- + **Purpose of the machine**
- + **Hazard zones**
- + **Safety rules and regulations**
- + **Functionality of the various components of the machine**
- + **Proper operation of the machine**

To assure full familiarization with the system, the training must be conducted in the native language of the operators involved.

Staff qualifications required in conjunction with the use of the HX33 pneumatic crimp machine:	
Installation Set-up Instruction	Technical personnel with language proficiency in either English or German, in addition to the native language of the operator.
Operation	Through qualified personnel trained as indicated above.
Maintenance Service	Technical personnel with proficiency in English or German.

The safety instructions, warnings, and precautions contained in the individual chapters must be strictly observed by all users and operators.

2.4 Designed Use

- + Realization of crimp connections up to a wire size of 10AWG (5.3mm²) depending on the terminal design.

The HX33 pneumatic crimp machine is designed for the use of the DMC “Y-die” series dies. The HX33 pneumatic crimp machine should only be used with the dies specified by DMC. It is only allowed to use the HX33 pneumatic crimp machine together with the DMC die sets for the preparation of crimp connections!

2.5 Predictable Misuse

- + Every application which is not mentioned in chapter 2.4 “Designed Use”.

2.6 Hazardous Areas

1. Hazardous Area: Area of interchangeable crimping dies
Person at risk: Operator
Type of Hazard: Hand Injuries
2. Hazardous Area: Opened machine
Person at risk: Installation Engineer
Type of Hazard: Direct or indirect contact with movable parts of the machine,
Hand injuries (cuts from sharp edges)
Hand injuries (risk of crushing)

3 Shipment

3.1 Packing

Upon receipt, unpack the HX33 pneumatic crimp machine carefully and check that you have received all components against the packing slip, declaration of conformity, and operating instructions. We recommend that you retain the packing for further dispatch and for storage.

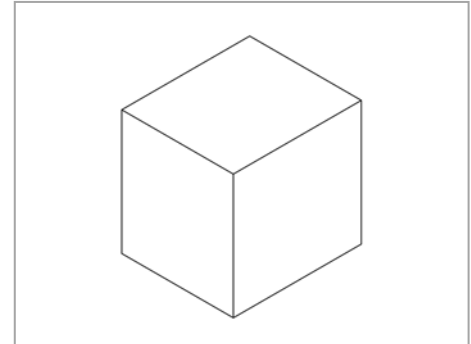


Fig. 3.1

Dimension :

Length: 24.5" (620 mm)

Width: 13.0" (330 mm)

Height: 14.2" (360 mm)

Gross-Weight: 41.1 lbs (18,5 kg)



DANGER

+ Use a chain hoist or lifting device to transport the crimping machine.

3.2 Packing Contents

1 pc	HX33 pneumatic crimp machine (without die set)
1 pc	Safety guard
1 pc	Pneumatic foot pedal with cover
1 pc	Hexagon wrench key SW 2,0
1 pc	PU compressed-air hose Ø0.31/0.24" a 39.37" (Ø8/6mm a 1Meter)
1 pc	PU compressed-air hose Ø0.24/0.16" a 78.74" (Ø6/4mm a 2Meter)
1 pc	PU compressed-air hose Ø0.16/0.08" a 78.74" (Ø4/2mm a 2Meter)
1 pc	Operating Instructions (German original version)
1 pc	Operating Instructions (English translation of the original version)
1 pc	Declaration of conformity

4 Technical Description

4.1 Operators Guide

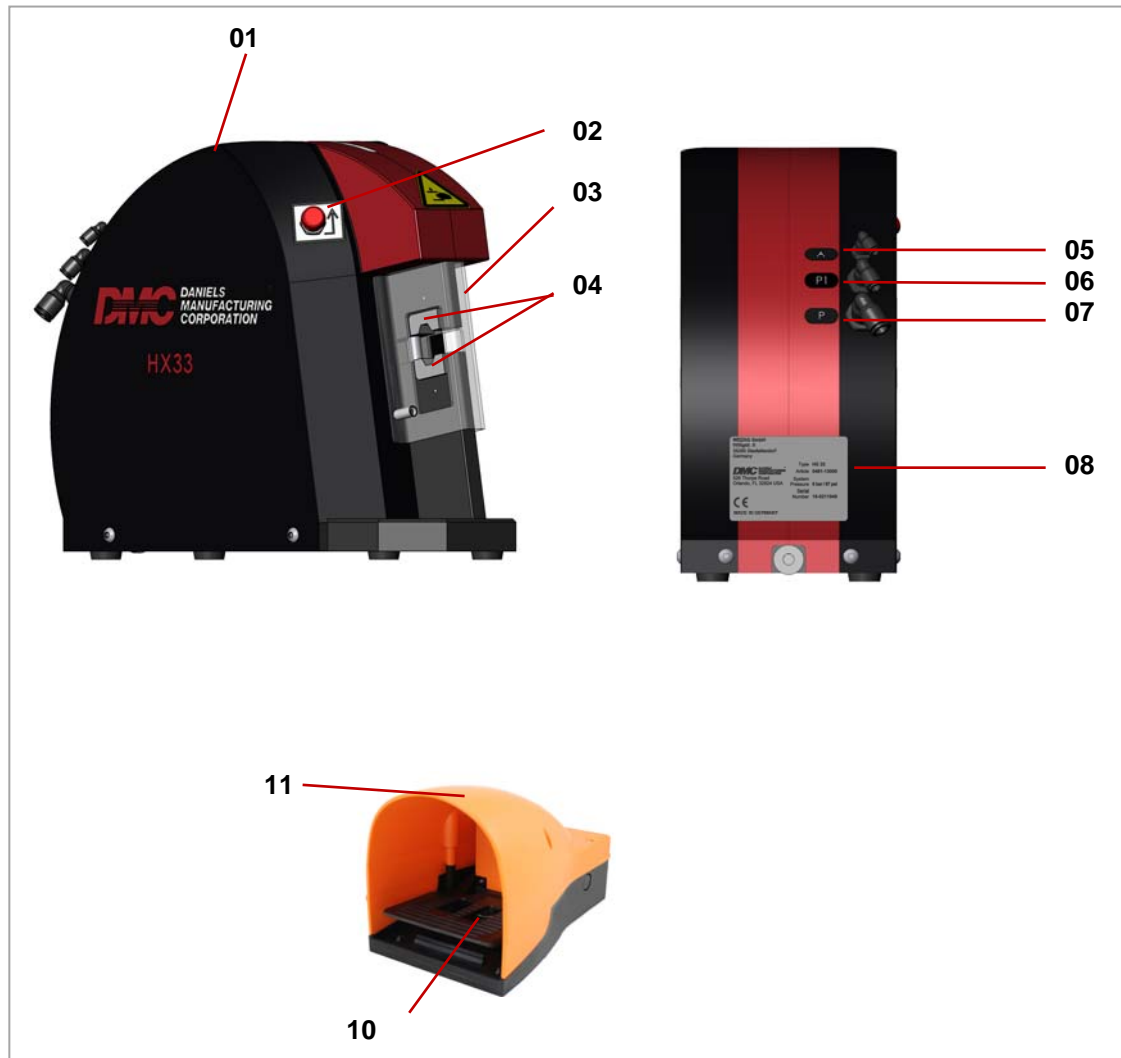


Fig. 4.1

Item	Description
01	HX33 pneumatic crimp machine
02	Release Button
03	Safety guard
04	Die Set
05	A =control pressure (foot pedal)
06	P1 = compressed air (foot pedal)
07	P = compressed air
08	Label with serial number
09	Pneumatic foot pedal
10	Safety cover for foot pedal

4.2 Machine Identification

Item	Description
1	Machine Type
3	Article Number
4	Air Pressure
2	Serial Number



Fig. 4.2

4.3 Technical Data

Dimension:

Length overall:	13.1" (335 mm)
Width:	5.1" (135 mm)
Height:	10.2" (260 mm)

Weight with foot pedal:	32 lbs (14,5 kg)
-------------------------	------------------

Air pressure:	max. 87-116 psi / 6-8 bar
Air consumption per stroke:	5.88 l (at 87 psi / 6 bar) 7,56 l (at 116 psi / 8 bar)
crimp force at 87psi/6 bar:	3821 lbf / 17 kN
crimp force at 116psi/8 bar:	4945 lbf / 22 kN
Noise level:	73 dB (A)

4.4 Safety Guard

The HX33 pneumatic crimp machine has a special safety guard (in the scope of the delivery).



INFORMATION

- + In case of an accident, because of mishandling or manipulation of the safety guard, the manufacturer cannot be held liable for any resultant damage or injury.

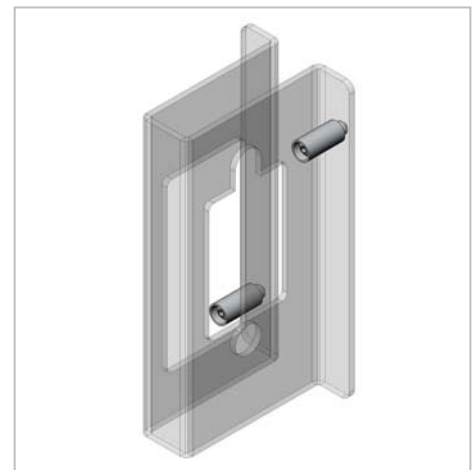


Fig. 4.3

4.5 Release Button

In case of jammed jaws caused by operation or handling errors or wrongly placed terminals the jaws can be opened as follows:

- + Press release button.



Fig. 4.5

5 Transport and Installation

5.1 Transport

The weight of the HX33 pneumatic crimp machine is approx. 32 lbs / 14 kg.



CAUTION

- + Wear suitable safety shoes when transporting the machine.



ATTENTION

- + Pneumatic tubes must not be damaged.

5.2 Installation



ATTENTION

- + Position the HX33 pneumatic crimp machine on a flat surface and assure the stability of the machine. Ensure that the table or bench is stable enough to support the machine in normal use.
- + Assure an appropriate table height. The table height is dependent on the position of the operator, (work in sitting or standing position) according to prEN 894-4:2004, Table A.1.
- + Assure appropriate illumination of the working place. (EN 1837:2009-12 – chapter 4.2: "The general value of illumination has to be 500 lx [...]").



INFORMATION

- + To reduce production noise or vibration, the machine can be placed on an insulating rubber mat.

Place the foot pedal on the floor. No other place is allowed!



ATTENTION

- + Place the pneumatic tubes on the floor so that they do not cause a trip hazard.
 - + Do not lay the foot pedal in aisles or walkways.
 - + Assure free access to the operating elements of the machine, especially the foot pedal and the release button.
 - + During transport and installation of the machine, wear suitable safety shoes.
-



INFORMATION

- + To ensure fatigue-proof use, the user has to take a working position where the machine is in a right height position and an acceptable usage of the foot pedal is possible. The foot pedal has to be installed in a stable position. The position of the foot pedal should be chosen in that way, that free access will be possible.
-

6 Commissioning / Connecting to Compressed Air Supply



DANGER

- + Due to the risk of hand or finger injury, never try to reach into the machine before having assured that the machine is disconnected from the air supply. Disconnect the air supply before changing the safety guard and the dies.
-



CAUTION

- + The HX33 pneumatic crimp machine may only be set up and operated in perfect technical condition, observing all the safety regulations and considering any possible dangers.
 - + The crimp machine is only allowed to be used with mounted dies and safety guard.
 - + The crimp machine is only allowed to be used when it is in complete functional condition.
 - + When working with the HX33 pneumatic crimp machine, do not wear loose clothing, jewellery or long, loose hair that can get caught in the HX33 pneumatic crimp machine.
 - + Work with caution.
 - + In cases of a machine malfunction, production must be stopped and the malfunction must be fixed before continuing work with the machine.
 - + Only one person is allowed to work on or with the machine at a time.
 - + Only trained personal are allowed to work on or with the machine.
 - + Assure free access to the operating elements of the machine, especially the foot pedal and the release button. In case of imminent danger press the release button immediately. The release button must be within the direct reach of the operator. It must not be covered.
 - + It is only allowed to work with the specified air pressure.
-

Connect the pneumatic foot pedal connection 1 with connection P1 on the machine (PU air hose Ø 6 / 4 mm).

Install control cable of the pneumatic foot pedal 4 on connection A of the machine (PU air hose Ø 4 / 2,5 mm).

Use the HX33 pneumatic crimp machine only with conditioned and filtered air. Standard Filter: 30 µm.

Connect connection P of the machine with air hose Ø 8 / 6 mm to the compressed air supply.

Air pressure: 87-116psi / 6 - 8 bar

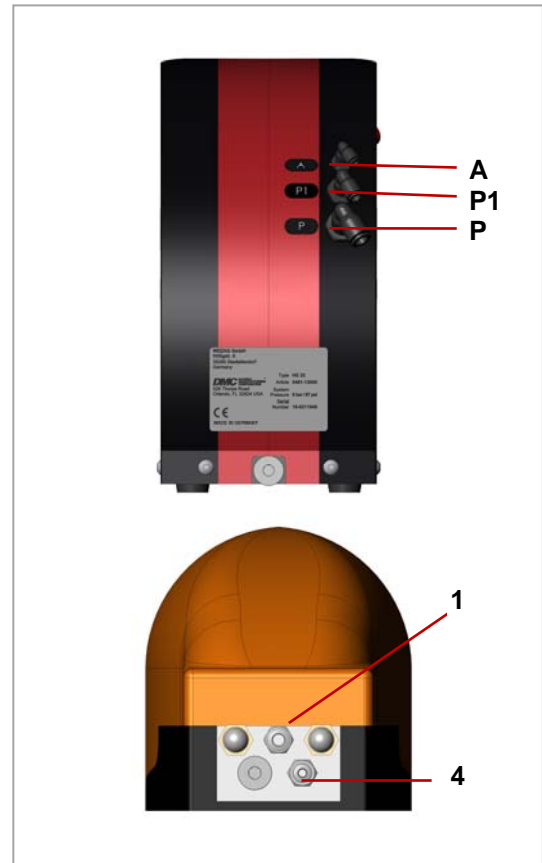


Fig. 6.1



CAUTION

- + Connect compressed air supply only with the supplied compressed air hose.
- + The machine can only be depressurized by disconnecting the machine from the main air supply.



INFORMATION

- + Use only filtered compressed air.

7 Tooling



DANGER

- + Due to the risk of hand or finger injury, never try to reach into the machine before having assured that the machine is disconnected from the air supply. Disconnect the air supply before changing the safety guard and the dies.



CAUTION

- + The HX33 pneumatic crimp machine may only be set up and operated in perfect technical condition, observing all the safety regulations and considering any possible dangers.
- + The crimp machine is only allowed to be used with mounted dies and safety guard.
- + When working with the HX33 pneumatic crimp machine, do not wear loose clothing, jewellery or long, loose hair that can get caught in the HX33 pneumatic crimp machine.
- + Work with caution.
- + Only one person is allowed to work on or with the machine at a time.
- + Only trained personal are allowed to work on or with the machine.
- + Assure free access to the operating elements of the machine, especially the foot pedal and the release button. In case of imminent danger press the release button immediately. The release button must be within the direct reach of the operator. It must not be covered.
- + It is only allowed to work with the specified air pressure.

1. Disconnect pneumatic supply.
2. Remove knurled head screws 1.
3. Slide the upper and lower die in the adapter and tighten them with knurled head screws 1.

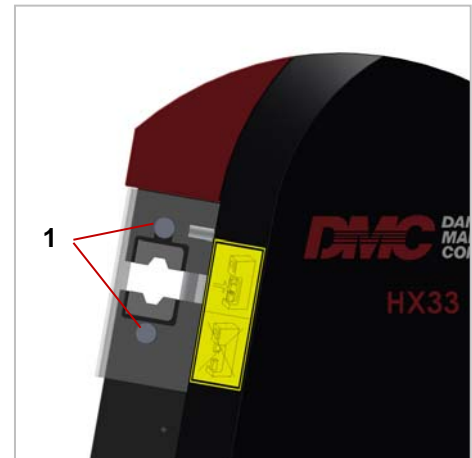


Fig. 7.1



INFORMATION

- + Control the right position of the die halves! The size of the profile should be in line!

8 Normal Operation / Production Cycle



DANGER

- + Due to the risk of hand or finger injury, never try to reach into the machine before having assured that the machine is disconnected from the air supply. Disconnect the air supply before changing the safety guard and the dies.
-



CAUTION

- + The HX33 pneumatic crimp machine may only be set up and operated in perfect technical condition, observing all the safety regulations and considering any possible dangers.
 - + The crimp machine is only allowed to be used with mounted dies and safety guard.
 - + When working with the HX33 pneumatic crimp machine, do not wear loose clothing, jewellery or long, loose hair that can get caught in the HX33 pneumatic crimp machine.
 - + Work with caution.
 - + In cases of a machine malfunction, production must be stopped and the malfunction must be fixed before continuing work with the machine.
 - + Only one person is allowed to work on or with the machine at a time.
 - + Only trained personal are allowed to work on or with the machine.
 - + Assure free access to the operating elements of the machine, especially the foot pedal and the release button. In case of imminent danger press the release button immediately. The release button must be within the direct reach of the operator. It must not be covered.
 - + It is only allowed to work with the specified air pressure.
-



ATTENTION

- + Position the HX33 pneumatic crimp machine on a flat surface and assure the stability of the machine. Ensure that the table or bench is stable enough to support the machine in normal use. During the utilization, the machine has to be placed on a table or a similar flat surface.
 - + Place the foot pedal on the floor. No other place is allowed. The foot pedal must be movable, so that the operator has the possibility to change his position for ergonomic and production needs. Do not lay the foot pedal in aisles or walkways.
 - + Place the pneumatic tubes on the floor so that they do not cause a trip hazard.
-

Crimp process:

1. Insert the crimp contact in the die profile. Please pay attention to the correct profile assignment and to the correct positioning within the crimp profile!
2. Insert the wire/cable which is stripped acc. to the specification and position it for crimping.
3. Press the foot pedal to start the crimp process.
4. Keep the foot pedal pressed until the crimp cycle is finished.
5. Remove crimped contact.

9 Maintenance



DANGER

- + Due to the risk of hand or finger injury, never try to reach into the machine before having assured that the machine is disconnected from the air supply. Disconnect the air supply before changing the safety guard and the dies.



CAUTION

- + Connect compressed air supply only with the supplied compressed air hose.
- + Before starting maintenance, disassembly or repair work, the crimp machine must be disconnected from air supply.
- + Maintenance work may be performed only by authorized and properly trained staff. The housing and the covers in particular may only be removed by specially trained staff.
- + When working with the HX33 pneumatic crimp machine, do not wear loose clothing, jewellery or long, loose hair that can get caught in the HX33 pneumatic crimp machine.
- + The crimp machine is only allowed to be used when it is in complete functional condition.
- + The crimp machine is only allowed to be used with mounted dies and safety guard.
- + Work with caution.
- + Only one person is allowed to work on or with the machine at a time.
- + Assure free access to the operating elements of the machine, especially the foot pedal and the release button. In case of imminent danger press the release button immediately. The release button must be within the direct reach of the operator. It must not be covered.
- + It is only allowed to work with the specified air pressure.

9.1 Maintenance Plan



DANGER

- + Due to the risk of hand or finger injury, never try to reach into the machine before having assured that the machine is disconnected from the air supply. Disconnect the air supply before changing the safety guard and the dies.



CAUTION

- + Before starting maintenance, disassembly or repair work, the crimp machine must be disconnected from air supply.
- + Maintenance work may be performed only by authorized and properly trained staff. The housing and the covers in particular may only be removed by specially trained staff.
- + When working with the HX33 pneumatic crimp machine, do not wear loose clothing, jewellery or long, loose hair that can get caught in the HX33 pneumatic crimp machine.
- + Work with caution.

Regular maintenance and cleaning of the parts which can be reached without opening the machine will prolong the life of the machine. Do not use rough materials to clean the machine such as steel wool. The machine and or machine part should not be cleaned with compressed air. The crimping machine as well as the machine parts must not be cleaned with hard objects like scrapers, steel wool or similar. Vacuum heavily soiled parts and wear.

9.1.1 Daily

- + Visual inspection of the HX33 pneumatic crimp machine.
- + Check air pressure (87-116psi / 6-8 bar) of the house installation (manometer not in the scope of the delivery).

9.1.2 After every 100.000 crimp cycles or every 2 years

Please contact the producer or the distributor of the machine for inspections in the recommended intervals.

Service address:

DMC
Daniels Manufacturing Corporation
526 Thorpe Road
Orlando, FL 32824-8133
USA

Telephone: 001 407 855 6161

www.dmctools.com

Please have the following information ready when you contact service:

- + Machine Type/Part Number
- + Machine Serial Number

10 Problem Handling and Fault Diagnostics



DANGER

- + Due to the risk of hand or finger injury, never try to reach into the machine before having assured that the machine is disconnected from the air supply. Disconnect the air supply before changing the safety guard and the dies.
-



CAUTION

- + Before starting maintenance, disassembly or repair work, the crimping machine must be disconnected from air supply.
 - + Maintenance work may be performed only by authorized and properly trained staff. The housing and the covers in particular may only be removed by specially trained staff.
 - + When working with the HX33 pneumatic crimp machine, do not wear loose clothing, jewellery or long, loose hair that can get caught in the HX33 pneumatic crimp machine.
 - + Work with caution.
 - + Before commissioning the machine, it is always important to check whether all safety devices, especially the safety guard and the die set, are installed and are functioning correctly.
 - + Check the release button before starting the work on the crimp machine. In the case of imminent danger immediately press the release button. The release button must be within the direct reach of the operator. It must not be covered.
-



HINWEIS

- + If the dies are blocking, press the release button and disconnect the machine from the air supply.
-

10.1 Forced regulation catches / Alignment of the limit switches

1. Disconnect from the air supply.
2. Remove the housing from the machine.
3. Adjust screw 1.
The screw is fixed with a medium strong screw locking.
4. Install the housing again.

The machine is ready to operate again.

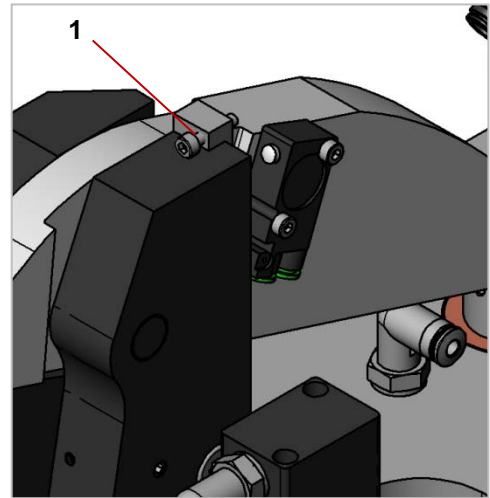


Fig. 10.1

In the event of a problem, our customer service personnel will be able to help you.

Service address:

DMC
Daniels Manufacturing Corporation
526 Thorpe Road
Orlando, FL 32824-8133
USA

Telephone: 001 407 855 6161

www.dmctools.com

Please have the following information ready when you contact service:

- + Machine Type/Part Number,
- + Machine Serial Number

11 Removal from Service, Demounting, Disassembly,



DANGER

- + Due to the risk of hand or finger injury, never try to reach into the machine before having assured that the machine is disconnected from the air supply. Disconnect the air supply before changing the safety guard and the dies.
-



CAUTION

- + Before starting maintenance, disassembly or repair work, the crimping machine must be disconnected from air supply.
 - + Maintenance work may be performed only by authorized and properly trained staff. The housing and the covers in particular may only be removed by specially trained staff.
 - + When working with the HX33 pneumatic crimp machine, do not wear loose clothing, jewellery or long, loose hair that can get caught in the HX33 pneumatic crimp machine.
 - + Only one person is allowed to work on or with the machine at a time!
 - + Work with caution.
 - + The machine can only be depressurized by disconnecting the machine from the main air supply.
-

12 Storage

Store the machine in the original carton at room temperature.

13 Disposal

For the disposal of the HX33 pneumatic crimp machine, send it back to DMC.

14 Exploded View Drawing, Spare Part List

14.1 Exploded View Drawing

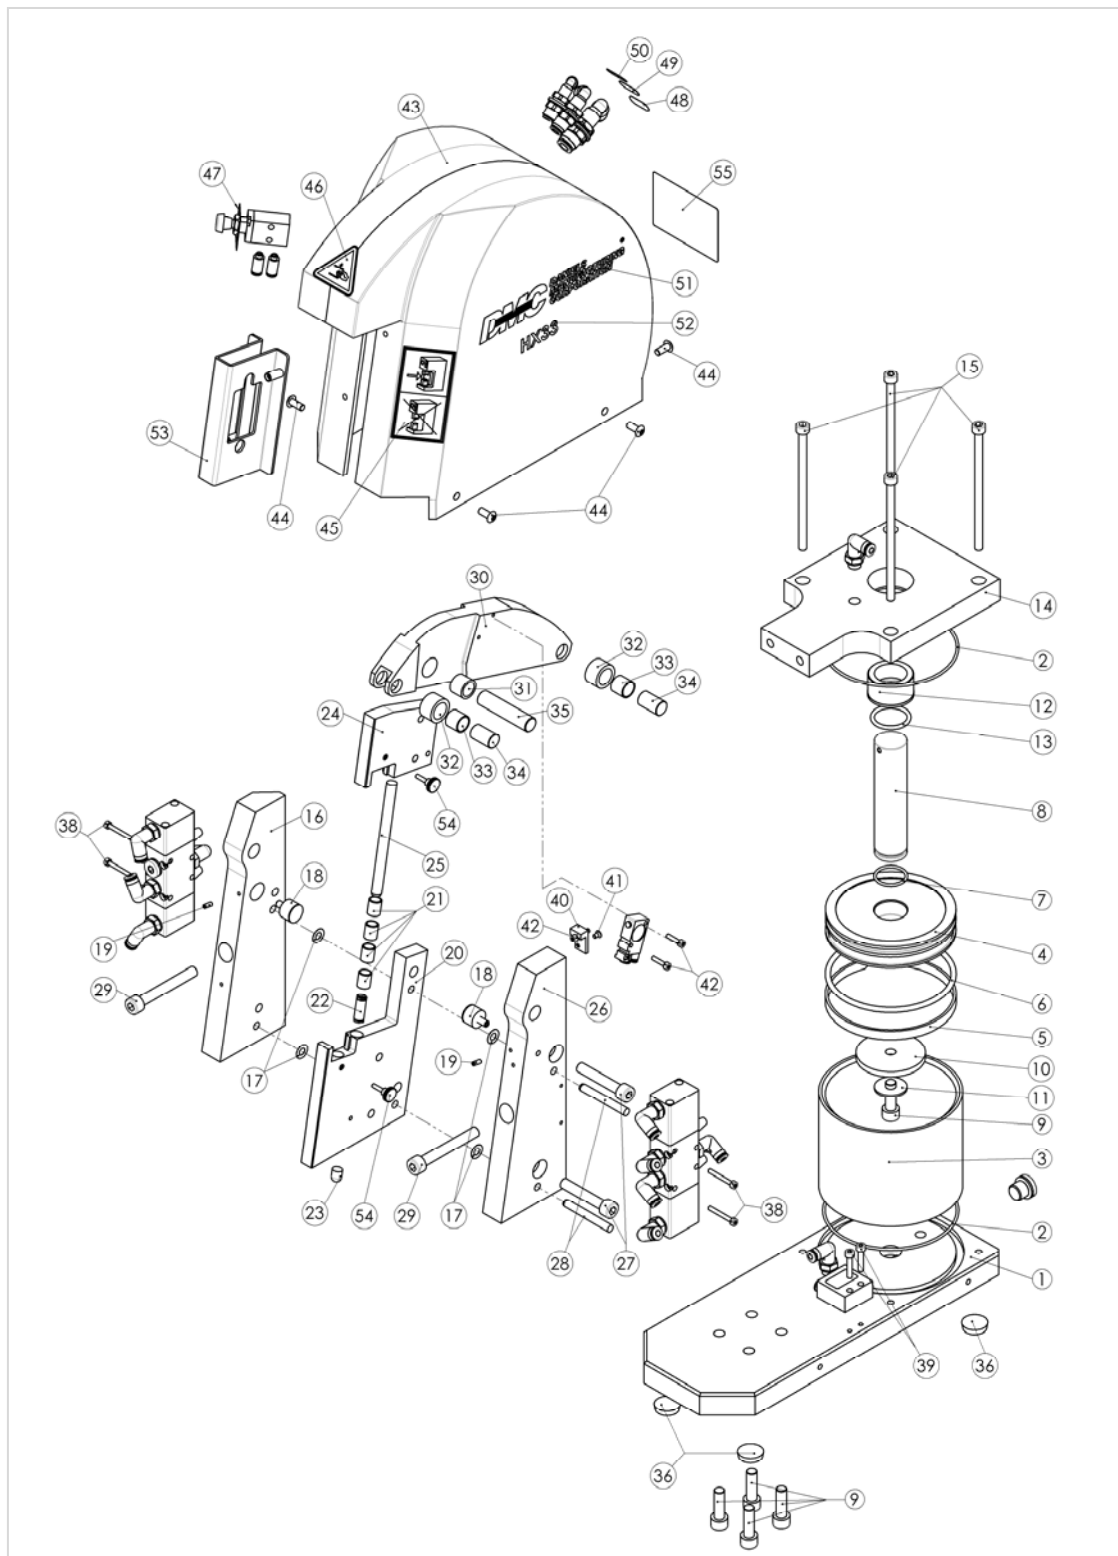


Fig. 14.1

14.2 Parts List Exploded View Drawing

Pos. No.	Pieces	Art.-No	Description
1	1	2481-01001	Bottom plate
2	2	8480-84001	O-Ring Ø100x2 NBR-70 bk. ISO3601
3	1	2480-82016	Cylinder housing
4	1	2480-84012	Piston
5	1	2480-84015	Piston guide band 2x8x308 PTFE-carbon
6	1	8480-84007	O-Ring Ø92x4 NBR-70 bk. ISO3601
7	1	8480-84002	O-Ring Ø22x2 NBR-70 bk. ISO3601
8	1	2481-13024	Piston rod
9	1	8480-99137	Hex. socket screw M8x25 DIN912
10	1	2481-13028	Washer Ø53/8x5 NBR
11	1	8480-99008	Large diameter washer 8x25 galvanized
12	1	2481-20008	Cylinder liner
13	1	8480-84003	O-Ring Ø25x3 NBR-70 bk. ISO3601
14	1	2481-13012	Head plate
15	4	8480-99129	Hex. socket screw M6x110 DIN912
16	1	2481-13002	Tension plate, left
17	4	8480-99055	Adjusting washer Ø6/12 x 0,2 DIN 988
18	2	1481-13004	Plunger compl.
19	2	8183-79006	Hexagon socket set screw M3x8 DIN913
20	1	2481-13003	Lower die plate
21	4	8481-13001	Plain bearing bush 8/10x12 metal-polymer
22	1	8481-13003	Pressure spring D6,4 / d1,1 / Lo41 / shape 1
23	1	2481-13006	Spring pin
24	1	2481-13004	Upper die plate
25	1	8481-13013	Cylinder bolt 8m6x100 DIN6325
26	1	2481-13001	Tension plate, right
27	2	8481-01001	Hex. socket screw M8x45 DIN912
28	2	8333-10014	Cylinder bolt 6m6x50 DIN6325
29	2	8480-88008	Hex. socket screw M8x60 DIN912
30	1	2481-13026	Lever
31	1	8480-89037	Plain bearing bush 12/16x12 sinterbronze
32	2	2481-13007	Bearing bush 20/14H7x12
33	2	8481-13002	Plain bearing bush 12/14x12 iglidur x
34	2	2481-13011	Bolt 12h9x20
35	1	2481-13009	Bolt 12h9x52
36	4	8480-84004	Rubber foot Ø20
37	1	1481-13003	Pneumatic complete
38	4	8480-89010	Hex. socket screw M3x25 DIN912
39	2	8180-23002	Hex. socket screw M4x20 DIN912
40	1	2481-13027	Stop holder
41	1	8332-15001	Slotted countersunk head screw M3x5 DIN 963
42	3	8480-99121	Hex. socket screw M3x14 DIN912
43	1	1481-13001	Cover complete
44	6	8481-02008	Hexagon lens head screw M5x12 (galvanized-blue)
45	1	5480-88002	Label "Hinweis Fingerschutz"
46	1	5480-81005	Label "Warnung Handverletzung"
47	1	5481-14003	Label "Release"
48	1	5481-02006	Label P
49	1	5481-03004	Label P1
50	1	5481-03003	Label A
51	2	5481-13002	Label "DMC"
52	2	5481-13003	Label "HX 33"
53	1	1481-13005	Safety guard complete Daniels

Pos. No.	Pieces	Art.-No	Description
54	2	8481-16001	Knurled head screw M3x12 DIN 464 - A2
55	1	4481-13100	Machine identification Daniels

The repair of the machine has to be executed by trained personnel. Please contact the producer or distributor of the machine!

Service address:

DMC
Daniels Manufacturing Corporation
526 Thorpe Road
Orlando, FL 32824-8133
USA

Telephone: 001 407 855 6161

www.dmctools.com

14.3 Pneumatic Diagram

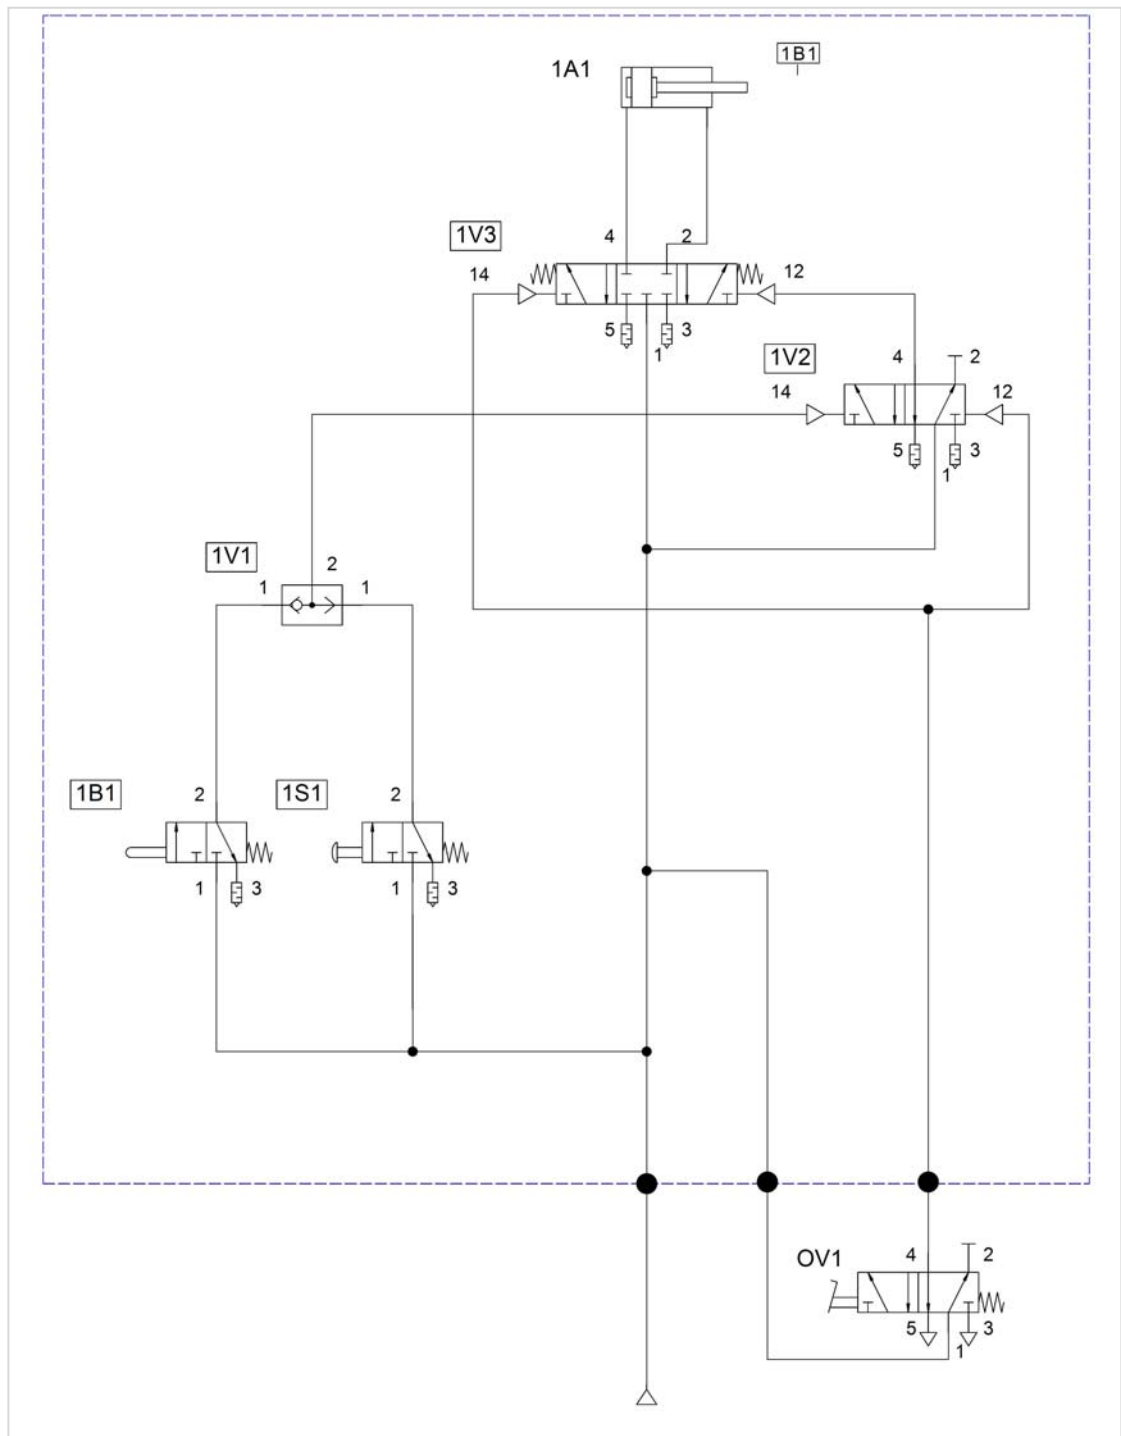


Fig. 14.2

14.4 Parts List Pneumatic

ID	Pieces	Article No.	Description
1V1	1	8480-88086	Oder valve
1V2	1	8481-13011	5/2 pneumatic valve
1V3	1	8480-88089	5/3 pneumatic valve
1B1	1	8480-88005	3/2 pneumatic mini-touchvalve
1S1	1	8480-89007	3/2 pneumatic touchvalve (retracted)

The repair of the machine has to be executed by trained personnel. Please contact the producer or distributor of the machine!

Service address:

DMC
Daniels Manufacturing Corporation
526 Thorpe Road
Orlando, FL 32824-8133
USA

Telephone: 001 407 855 6161

www.dmctools.com

14.5 Accessories overview for re-orders

1. Pneumatic foot pedal with cover
2. Air hose set
3. Hexagon Wrench Key AF 2,0

Order-No. 1481-03033
Order-No. 1881-03001
Order-No. 8480-86018

Service Address:

DMC
Daniels Manufacturing Corporation
526 Thorpe Road
Orlando, FL 32824-8133
USA

Telephone: 001 407 855 6161

www.dmctools.com

Please have the following information ready when you contact service.

- + Machine Type/Part Number
- + Machine Serial Number

14.6 Additional Information / Limitation of Liability / Limited Warranty

DMC offers complete refurbishing, and recalibration services.

DMC specially engineers, and manufactures complete tool kits to satisfy individual customer requirements, such as total aircraft support, general shop maintenance, production, on board ship maintenance, and vehicle service etc...

Limitation of Liability

DANIELS MANUFACTURING CORPORATION IS NOT LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY NATURE OR KIND RESULTING FROM THE USE, OR MISUSE, OF ANY OF ITS PRODUCTS. OWNERS AND USERS OF DMC PRODUCTS ASSUME FULL RESPONSIBILITY FOR INSTRUCTING THEIR EMPLOYEES IN THE PROPER AND SAFE USE OF SUCH PRODUCTS.

Limited Warranty

DMC (Daniels Manufacturing Corporation) warrants each new product sold by it to be free from defects in material and workmanship under normal use and service. DMC's obligation under this warranty is limited to the free correction or, at DMC's option, the refund of the purchase price of any such product which proves defective in normal service within ninety (90) days after delivery to the first user, provided that the product is returned to DMC with all transportation charges prepaid and which shall appear to DMC's satisfaction, after DMC's inspection, to have been defective in material and workmanship, it being understood that DMC products are not consumer products. This warranty shall not cover any damage to any product which, in the opinion of DMC, was caused by normal wear, misuse, improper operation, tampering, neglect or accident. This warranty is in lieu of all other warranties express or implied. No warranty, express or implied, is made or authorized to be made or assumed with respect to products of Daniels Manufacturing Corporation other than those herein set forth.